 


WorldPhone – Brief Operating Instruction

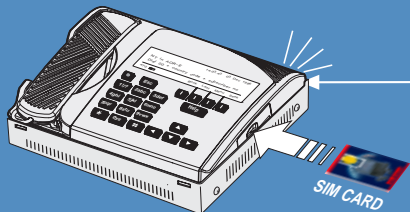

Switching ON

- 1 Insert SIM card (if SIM operated).
- 2 Switch ON power supply.
- 3 Press and hold telephone unit ON/OFF key for 2 secs.
- 4 Enter SIM/Phone PIN code:
and press **Ok**:
Adjust display brightness with arrow keys:





Main window





Satellite search

- 1 The WorldPhone starts searching for **any satellite**: **slow** intermittent beep tones sound (provided Tone is ON). Beeps are **rapid** when searching for a **specific satellite**.
- 2 When receiving an Inmarsat satellite signal, a short tone will sound, increasing in frequency when closing in. A signal strength bar and indication appear. (A readout above 400 should give a good signal.) Press **Ok**:
If low signal strength indication:
start search again: **Seek**
or select satellite with better coverage: **New**
- 3 Make sure that the Net provider is correct.

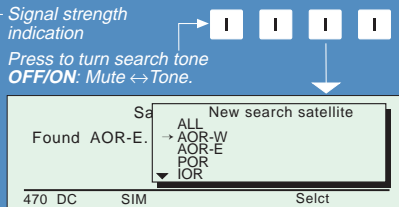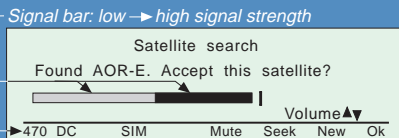

Making a call

- 1 Dial 00 followed by country code and subscriber number, e.g.: **00 47 67244700** (or, use short number).
- 2 Send the number: **Call**.
- 3 Lift handset and proceed with call. *Handsfree when handset is in place.*
- 4 To disconnect call, put down handset. *Press Clear when handsfree.*

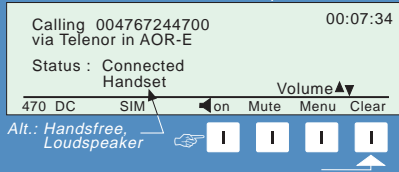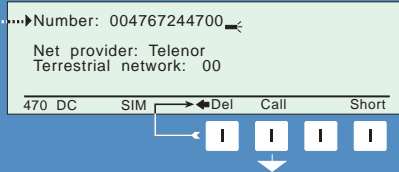



Alt.: Handsfree, Loudspeaker

WorldPhone – Brief Operating Instruction


The WorldPhone provides communication with the public telephone network via **satellite**, which requires **free line of sight**.

Four satellites are positioned stationary above **equator**. The satellites provide the coverage shown on the map below.

The WorldPhone searches **any satellite** as default.

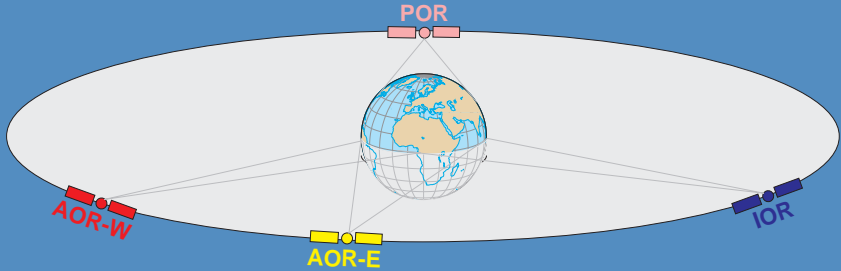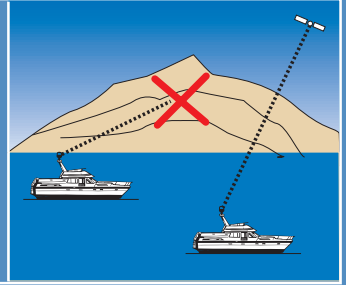

WorldPhone coverage

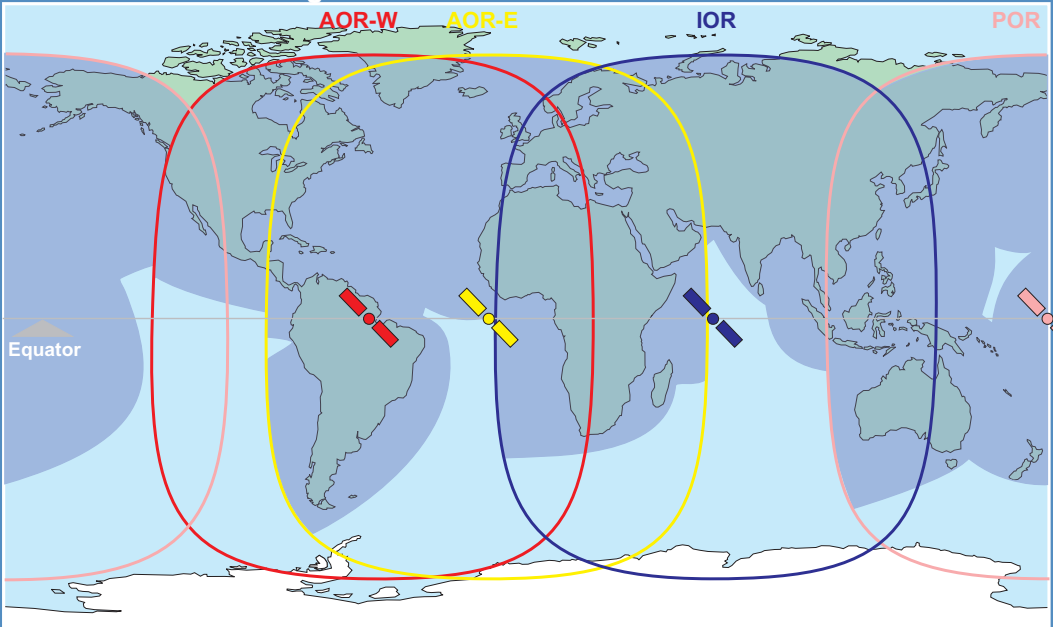

NERA
TELECOMMUNICATIONS